

SECTION 5

EAST RAMP AND FLOAT POND OPERATIONS

5.3 Bravo Gate Procedures *(1/2025)*

At the eastern end of Taxiway Bravo, east of Runway 2L/20R, a double cantilever gate spans the taxiway, allowing aircraft and equipment to move between the east and west sides of the airport. The gate is activated by keying the microphone five times on frequency 121.75.

When the gate is in motion, elevated amber lights on both sides of the fence will illuminate. It takes approximately 30 seconds for the gate to fully open, after which it will remain open for 60 seconds before automatically closing. Sensors on either side of the gate prevent it from closing while aircraft or vehicles are passing through. To ensure proper operation, only one aircraft should pass through per cycle.

If Bravo Gate does not respond after keying the microphone, wait at least 30 seconds before attempting again. If the gate remains unresponsive, notify Airport Operations. Any gate malfunctions should also be reported to the Airport Communication Center at 907-474-2530.